




Blossom
(718)-366-0088 | sales@BlossomUS.com | www.BlossomUS.com

For clarification, please contact us at (718)-366-0088 or sales@BlossomUS.com
All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.

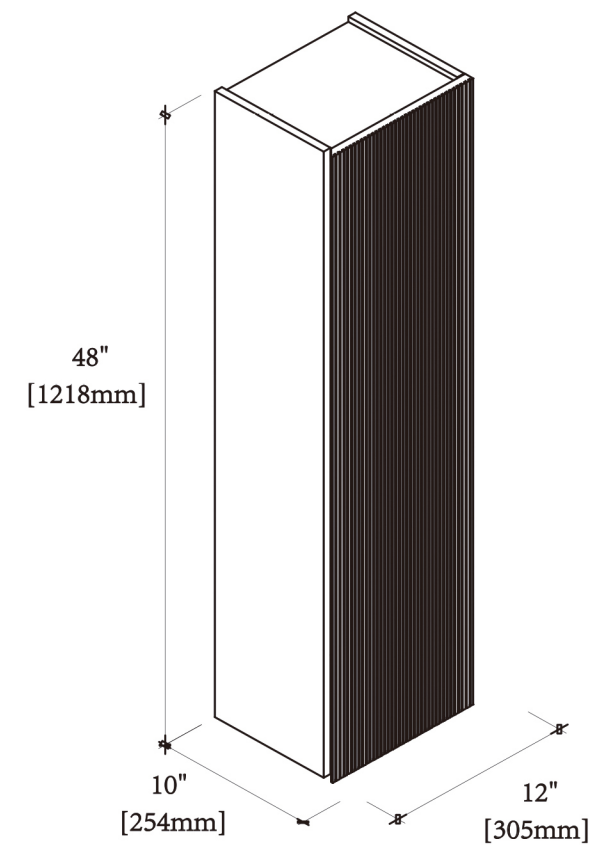

S8028 12 01/15/26/27

[POSITANO]
Series Vanities
Specification & Installation Guide

Features

- Furniture grade water resistant plywood, protected with several Coats of polyurethane.
- Drawers front with fluted design.
- 45 degree handle with UNIHOPPER hinge.
- 1 pc wood shelf and 2 pcs removeable glass shelves
- Side cabinet could be reversible installed

Package Dimension

12" 14-1/8" X 11-13/16" X 50"

Colors / Finishes

Matte White - 01

Light Grey - 15


Night Blue - 26

Aventurine Green - 27


Gross Weight


12" 45.64LBS

48" 12" X 10" X 48"

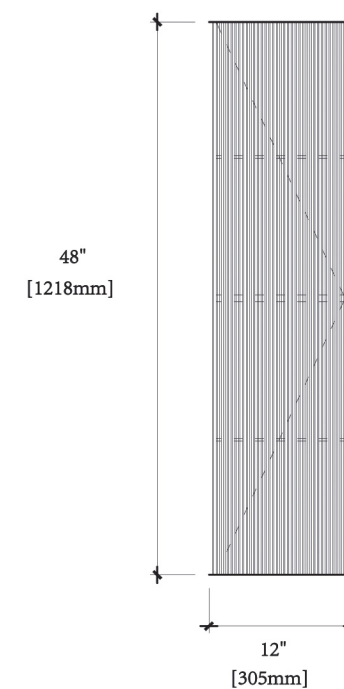


Side View

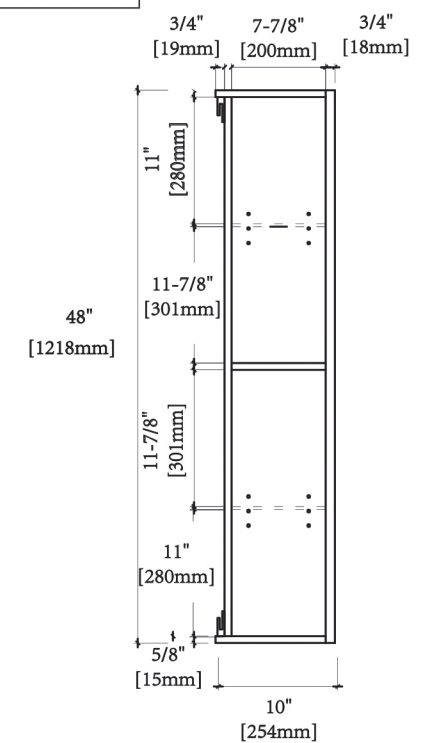

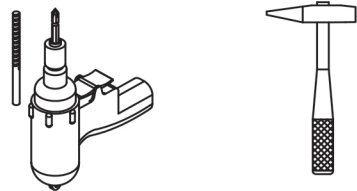Hardware				Tools (not includes)	
No.		Draw	Qty		
A	Anchors		6 pcs		
B	Lag Bolt (5CM)		6 pcs		
C	Leveling Bracket		2pcs		


Wall Preparation

The typical dimensions shown will result in side cabinet height of 62-3/4". If an alternate height is desired, adjust the rough-in and backing material heights using the dimensions provided.

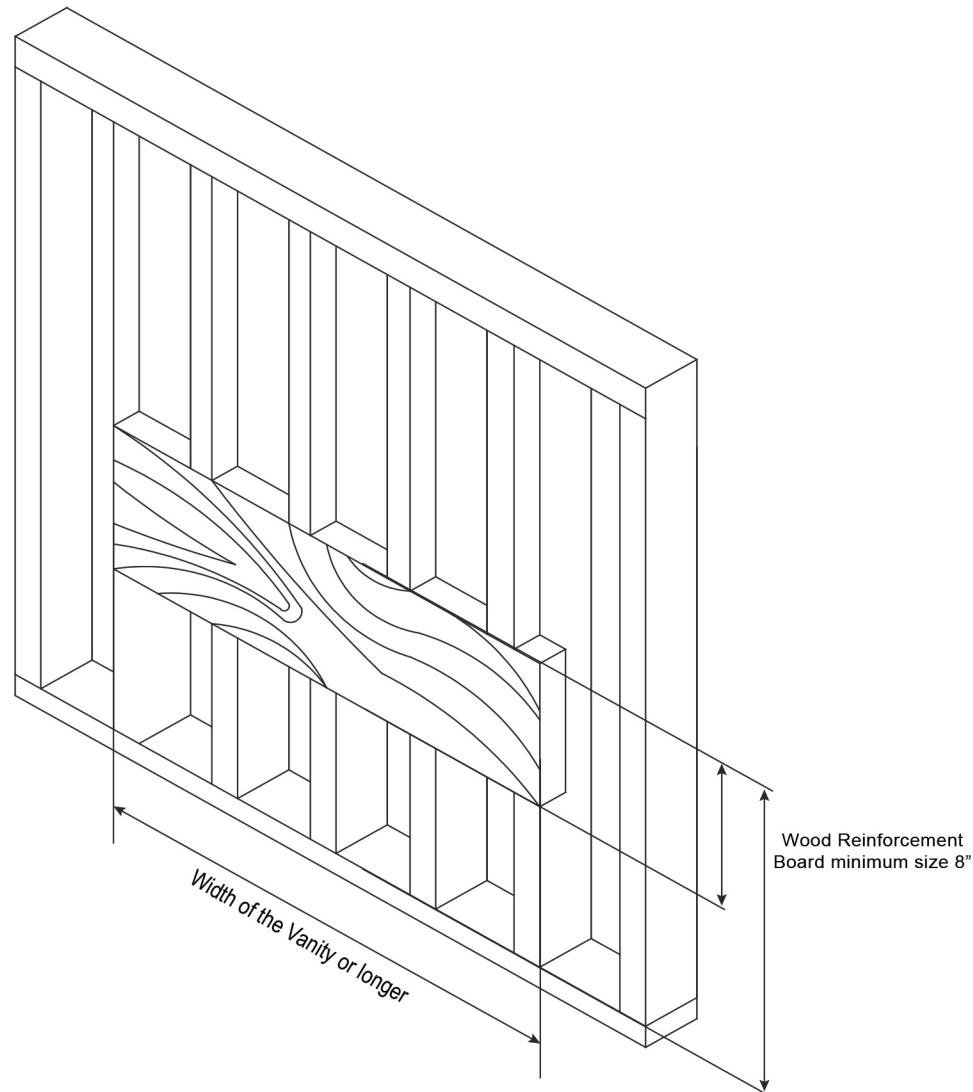


STEP 1. Cabinet positioning and installation

- The suggestion height of side cabinet installation is 62-3/4".
- The height of Leveling Bracket Installation is 59-3/8".

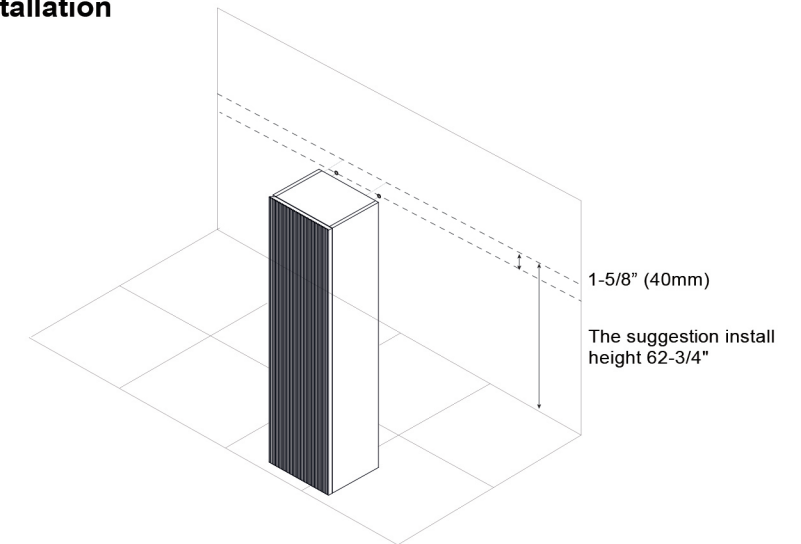

STEP 2. Leveling bracket installation

- Install leveling bracket after determining the height of side cabinet.

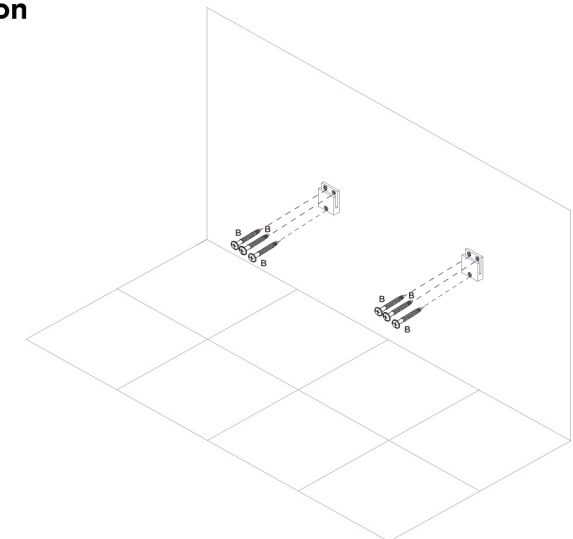

STEP 3. Hang the cabinet on the leveling bracket and adjust it horizontally

Place side cabinet on leveling bracket, Leveling brackets are only to level the side cabinet. They are not designed for permanent support. Side cabinet needs to be secured into the wood backing material.

